

Cassette to CD





STEP 1Press the **POWER** button



STEP 2

Press the **PHONO/TAPE/AUX** button to cycle through modes

• We want to select TAPE



STEP 3

Load your CD-R

• Press the Open/Close Button

NO TOC CD-R







STEP 4

Make sure **NO TOC** and **CD-R** show up on the display.

STEP 5

Set the **TAPE** switch to fit your cassette tape.

- If you have a plastic cassette, chose NORMAL.
- If you have a metal or chrome tape, chose HIGH.

STEP 6

Load your cassette in the cassette holder.

STEP 7

Find the place on the cassette where you want to start recording.

Press the | button on the cassette player.

Both the and II buttons should be pressed down.



STEP 8

Press the **RECORD** Button

- This starts the record pause mode.
- The red indicator on the RECORD button should blink.
- On the display, the REC indicator should blink and the II indicator should light up.



STEP 9

Press the Play/Pause (▶ / II) button on the main control panel to start recording

- This starts the recording process.
- Unpause the cassette by pressing the II button



STEP 10

If you would like to have separate tracks on the CD, press TRACK INCREMENT at the end of each song.





STEP 11

Recording will **automatically stop** at the end of each side.

 You can also stop recording by pressing the stop () button.

STEP 12

When you are done recording on your CD, you need to finalize it so it can be played on other devices.

- Switch from TAPE to CD.
- Press Finalize once.
- Then Press Enter.

TROUBLESHOOTING



RECORDING LEVEL

The VOLUME knob has no effect on volume of the recording.

- To adjust the level of the recording volume, adjust the REC LEVEL knob.
- Make sure that the volume display does not exceed "OVER."

ERASING CONTENT

You cannot erase tracks from CD-Rs. You can only add to unfinalized CD-Rs.

 You can erase tracks from CD-RWs. If you would like help with this, ask staff for help.